




User's Manual

用户使用手册

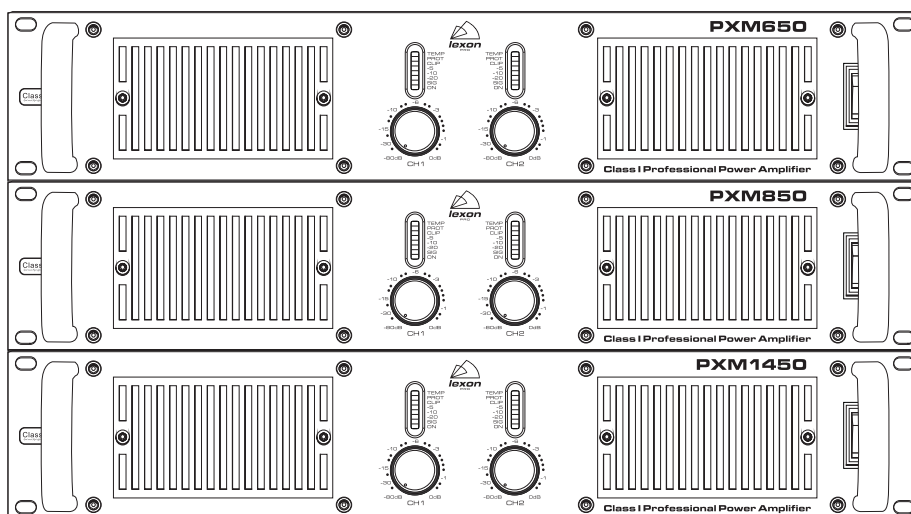

目录表

重要安全事项和符号说明.....	1
前言.....	2
前板功能介绍.....	3
后板功能介绍.....	4
系统连接实例.....	5
功放安装配电配线.....	6
功放散热条件.....	7
功放使用电平的调整.....	8
技术指标.....	9
故障排除.....	10
保修条例.....	11
产品物质拆分表.....	12

Table of contents

Important Safety Instruction and symbol description.....	13
Foreword.....	14
Front panel functions.....	15
Rear panel functions.....	16
System connection cases.....	17
Wiring and AC power supply.....	18
Thermal Dissipation.....	19
Power Level adjustment.....	20
Specifications.....	21
Troubleshooting.....	22
Warranty.....	23

1. 阅读这些规定。
2. 保存好这本使用手册。
3. 注意所有警告。
4. 遵守这些规定。
5. 可使用软布及风枪进行清洁。
6. 要注意不要形成热风循环。按建议方法进行安装。
7. 不要安装在热源附近，尽可能保证环境气温在35°C以下使用。
8. 确保接地良好，不建议浮地使用。
9. 保护电线防止被踩踏或挤压，尤其要注意插头、电源插座及其连接设备处。
10. 必须按照以下开关次序来使用该产品：前级-功放（开）、功放（关）-前级。
11. 通电前必须确保供电电压符合该设备的要求。
12. 若输入信号并接超过三台功放，建议使用信号分配器，以确保输入信号不至失真。
13. 不要将功放的某一个声道的输出接口接到另一个通道的输入接口。不要将功放的输出并联或串联到另一台功放的输出接口来使用。
14. 设计系统配置功放的时候，功放的功率应比音箱在相同阻抗的标称功率大50%-100%，应小心使用桥接模式。
15. 在维修功放的时候，禁止在桥接状态下将示波器的探头连接到功放的输出端，以免损坏功放和示波器。
16. 建议：1) 由于输出到音箱的电流较大，建议使用质量有保证的NL4型音箱螺旋插头。
2) 多台功放使用时应计算好合适的配电，以确保达到合格的使用环境。



提醒用户本手册中有重要的信息。



小心触电，非拥有相关资质的人员请勿擅自开盖维修。

警告

为避免着火或电击，不要将设备暴露在雨中或潮湿的环境中。

欢迎

非常感谢您购买蜚声演出器材制造有限公司产品。
PXM系列产品是公司专为大型体育场馆、大型演出、电影院、剧场的音响系统而设计。拥有丰富功能的PXM系列是您工作的得力助手，为了更好的发挥产品性能，请在使用前仔细阅读本手册。

拆包

请在拆开包装后，确认功放的外观没有在运输途中遭到损坏。确认功放的预设电压和你所在地的交流电压额定值匹配（详细信息见功放背板印刷）建议您保留包装箱，以便在需要退还产品时使用。

支持与服务

请直接联系蜚声演出器材制造有限公司在当地的分销商，以获得快速的售后服务和技术支持，如有技术问题需要直接与制造商联系，可以通过以下方式：
电子邮件：support@saechina.com
传真：+86-757-8568-8191


重要的安全注意事项

蜚声演出器材制造有限公司的产品设计已经考虑到安全使用的要求，并遵照相关的国家的安全规定检验出厂产品，只有合格的产品才能出厂销售。但由于本产品内部有危险高压和电量，因此要求用户必须认真阅读本手册的注意事项。如果产品跌落、凹入、浸湿或者里面有部件松动，则会大大增加人被电击的危险。当发生以上问题时，请马上切断电源，然后将本产品送还指定的经销商进行检查维修！

功率额定值

型号	8Ω*	4Ω**	2Ω**
PXM650	650WX2	1000WX2	1300WX2
PXM850	850WX2	1350WX2	1850WX2
PXM1450	1450WX2	2400WX2	3300WX2

1、*，此功率是按照EIA标准测量得出。
2、**，此功率是使用40ms脉冲1kHz正弦波在1%总谐波失真下测量得出。

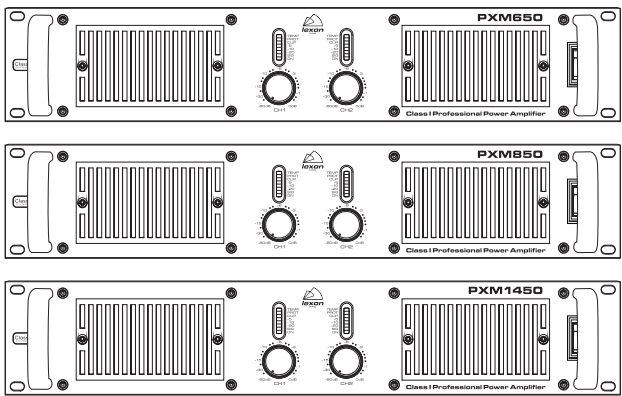


产品介绍

- PXM系列产品是一款全新的高效率和大功率的环牛功放。与之前产品相比较它在音质上有了突破性的改进，带给您的将是全新声音的享受。
- 采用第二代Class I电路拓扑，保持了纯模拟放大器的风格，同时具有类似于D类的高效率；
- 采用高性价比环牛电源，听感更优于普通开关电源。
- 前级/后级之间音频通道采用差分传输，确保了更低的输出底噪

功放模块及开关电源模块选材优势

- 采用AI插件工艺，从而具有以下两个优点：
 - 1) 每一颗元件都有足够的余量；
 - 2) 在恶劣的环境中更能抵挡日积月累的灰尘对电路的影响；
- 功率管直接安装于散热器上（无云母片等介质绝缘导热）减小了功率管的热阻，可有效降低功率管的瞬升高温；
- 选用高品质可调电位器，尽可能的减少了模块之间的连接导线及接口；
- 以上这些细微的设计都是为了确保新一代产品更加稳定、可靠。

前面板

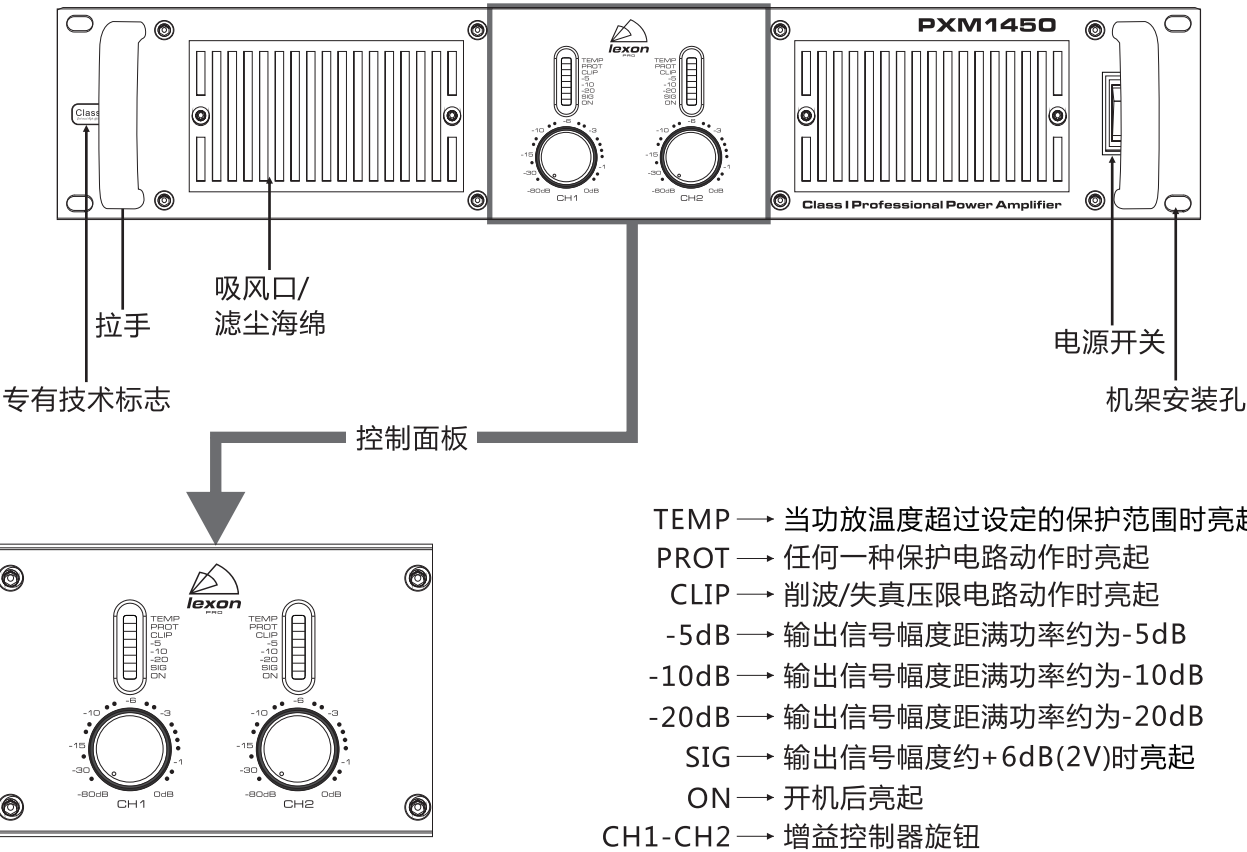


滤尘网清洁操作指引




在工程建设完成时，应对滤网进行首次清洁。
在往后的时间，应根据实际的情况，建议每季度定期进行清洁一次。

不允许拆除该滤网继续使用本产品，否则将影响本机的使用寿命。


在此情况下产生的故障，将被认定为脱保！

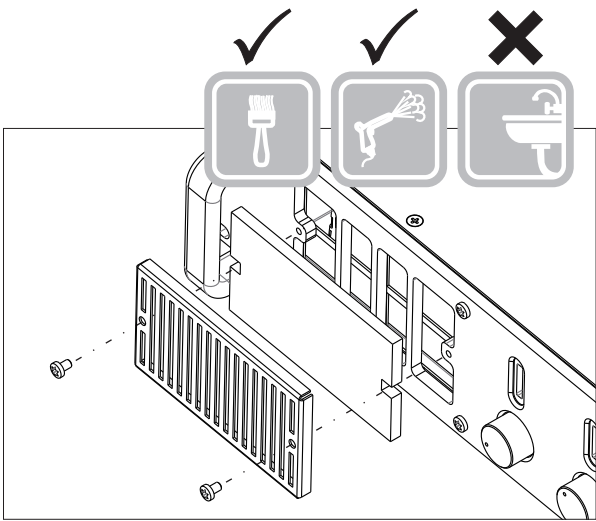

后面板

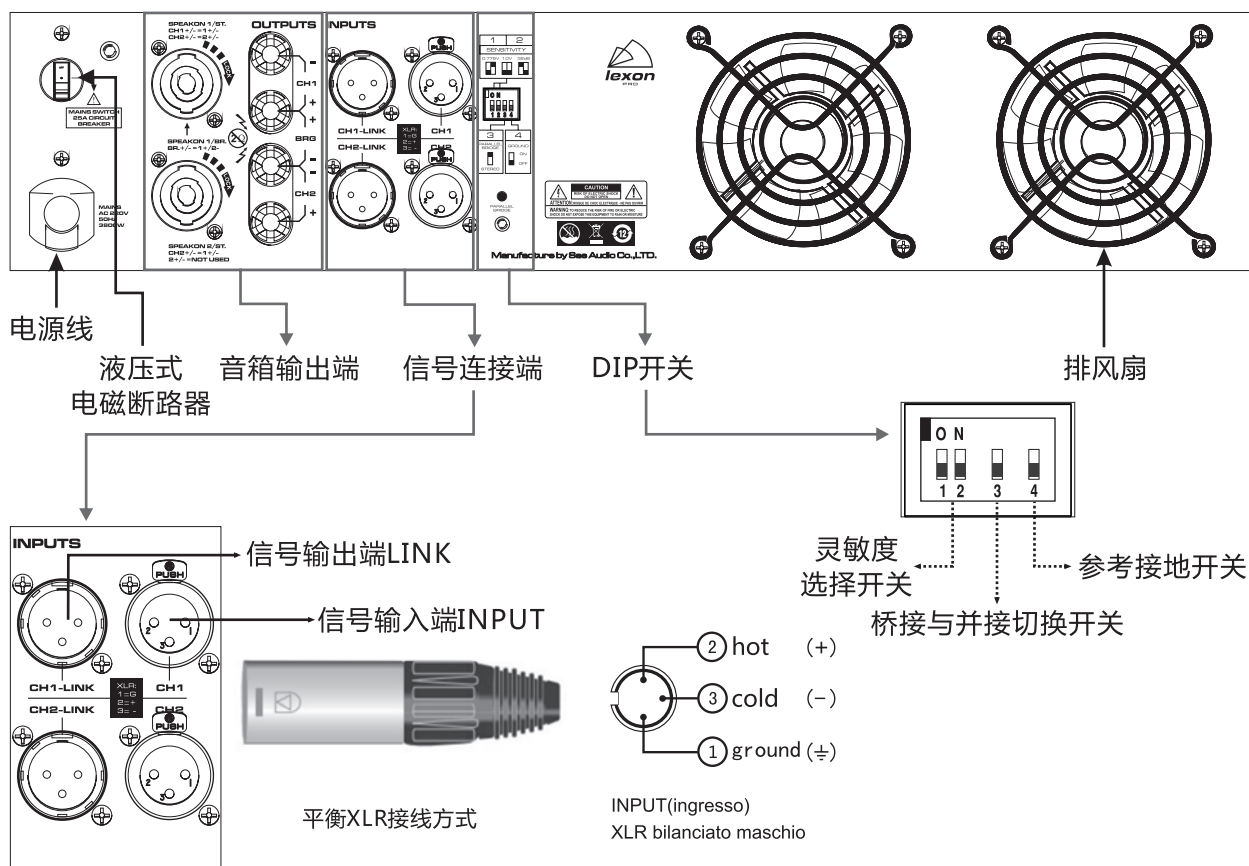


音箱输出端

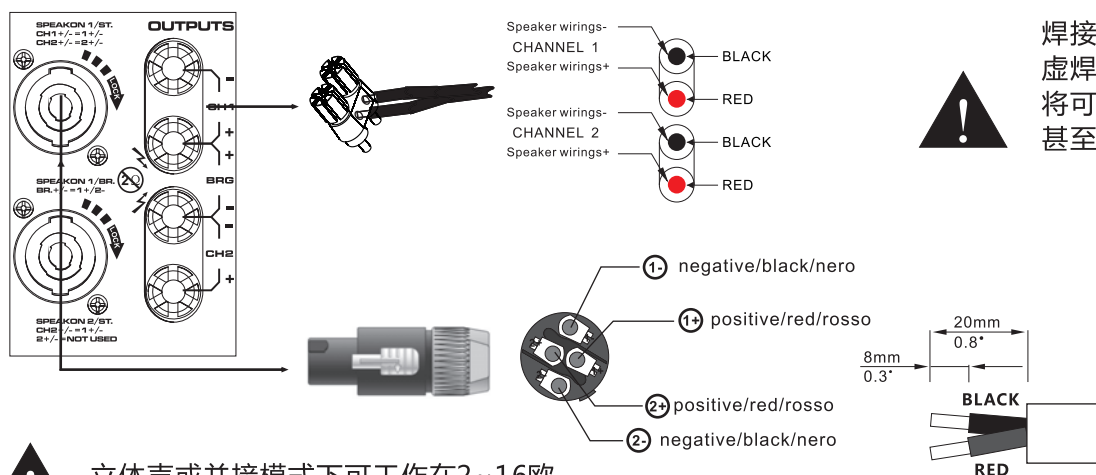


焊接质量很重要！
虚焊或是焊接错误，
将可能影响到正常使用，
甚至产生故障。

⚠ 立体声或并接模式下可工作在2~16欧
桥接模式下可工作在4~16欧


⚠ 不建议桥接4欧长期使用，这可能导致
功放使用寿命缩短或者产生故障！

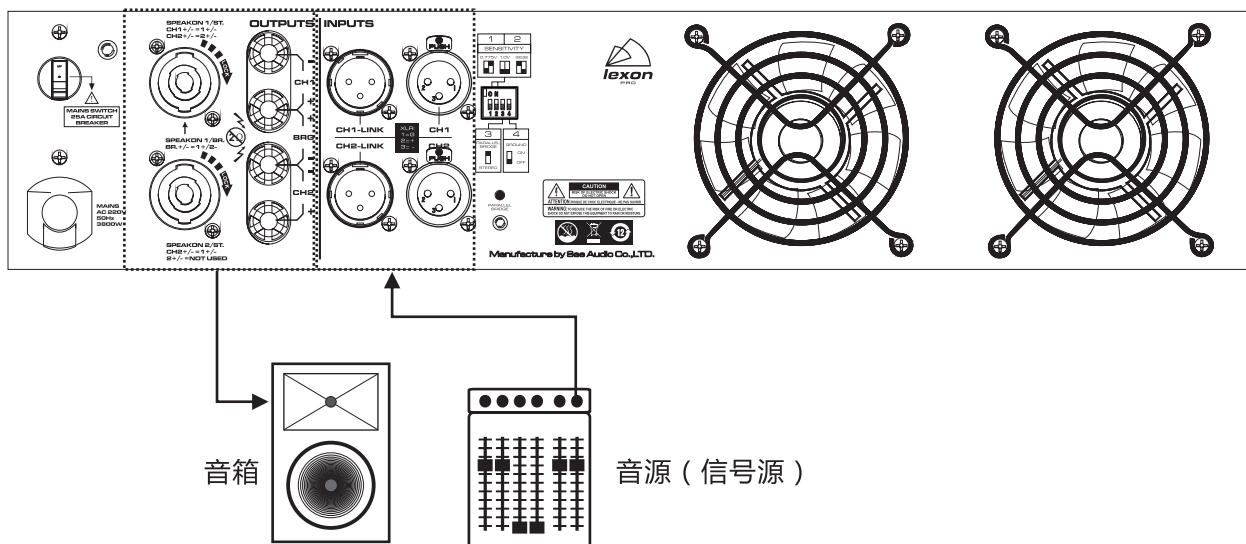


桥接模式

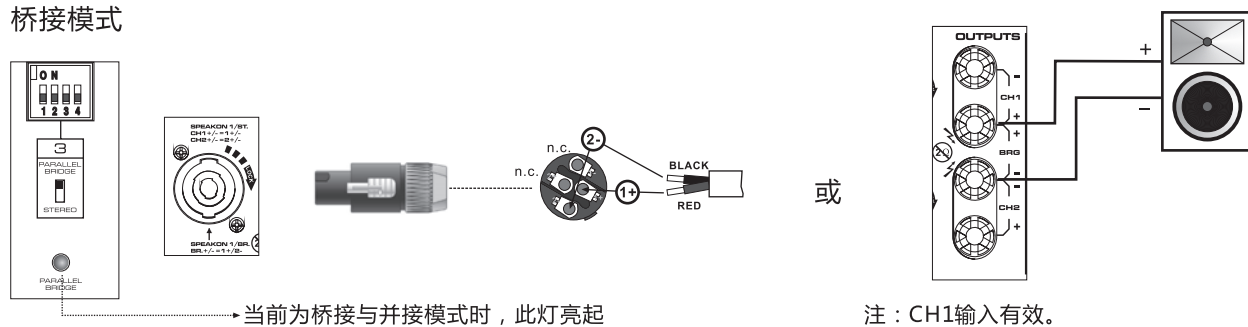

并接模式

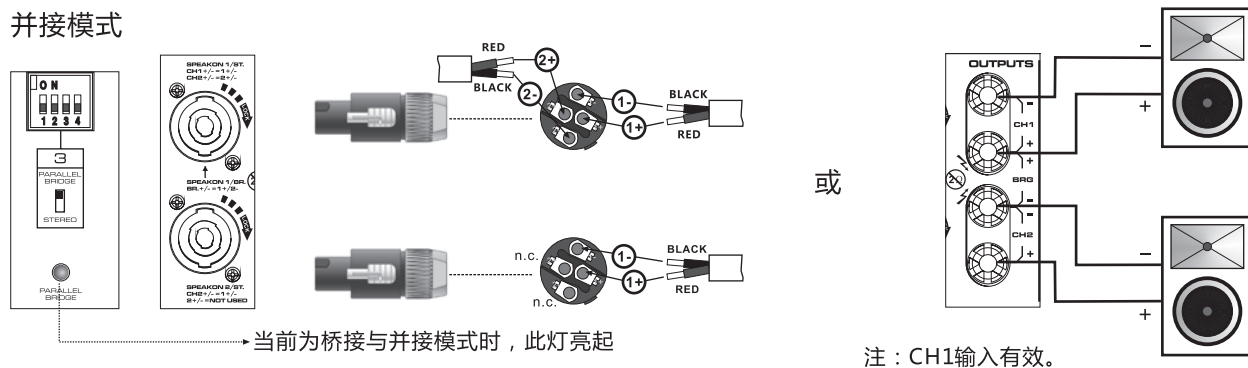

立体声模式

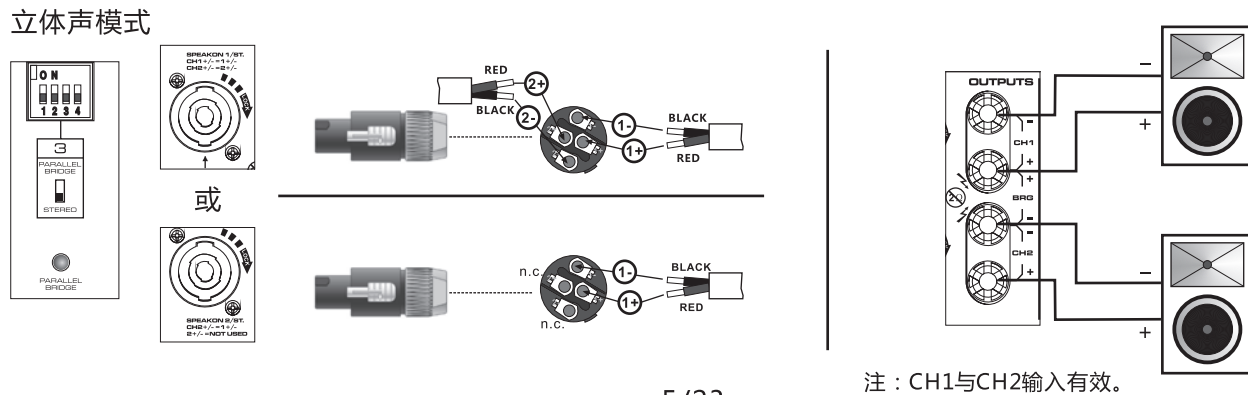

配线配电

放大器的电源供应作为一个非阻性负载，所以计算“伏特x安培=瓦”不会是正确的,同时因为其应用在非稳定输出的音乐波形信号上，所以其实际的耗电量不能以固定的公式进行计算。

耗散功率依据1kHz/8Ω 2/3额定功率测得。

参考不同型号产品的耗散功率与供电/AC进行配线
建议用户搭配不低于以下的配线径规格，以获得更佳的综合性能。

标配电压：220/230V/240V

型号	耗散功率	配线径规格
PXM650	1700W	≥1.5mm ²
PXM850	2300W	≥2mm ²
PXM450	3800W	≥2mm ²

标配电压：110/115V/120V

型号	耗散功率	配线径规格
PXM650	1700W	≥2mm ²
PXM850	2300W	≥2.5mm ²
PXM1450	3800W	≥3.2mm ²

当多台使用同一电源插板时，其供电电缆截面应根据总需求作出相应的增加，而插板内部线缆也需要确认能满足电力的需求。

多台安装

当在同一电力供应的条件下，其总配电功率超过10kW时，建议采用三相配电。须使用三相五线制时，禁止有零线与地线共用的情况。

通电检查



首次通电必须用万用表测量电源电压，并确认是否符合产品的要求条件。
在首次通电时，请不要连接信号线和音箱线，您只需作简单的通电检查，确认其正常后请将电源关闭。

安全地线之重要性




产品应用上建议您必须接地，以策安全。

若您没有及格的地线或不接地时，当人体接触产品其外壳，可能会感到有电击之感，甚至感到不安。为避免此种情况的出现，请务必使用合格的地线将产品接地。

堆叠安装

为保障散热环境，请安装产品时满足以下条件

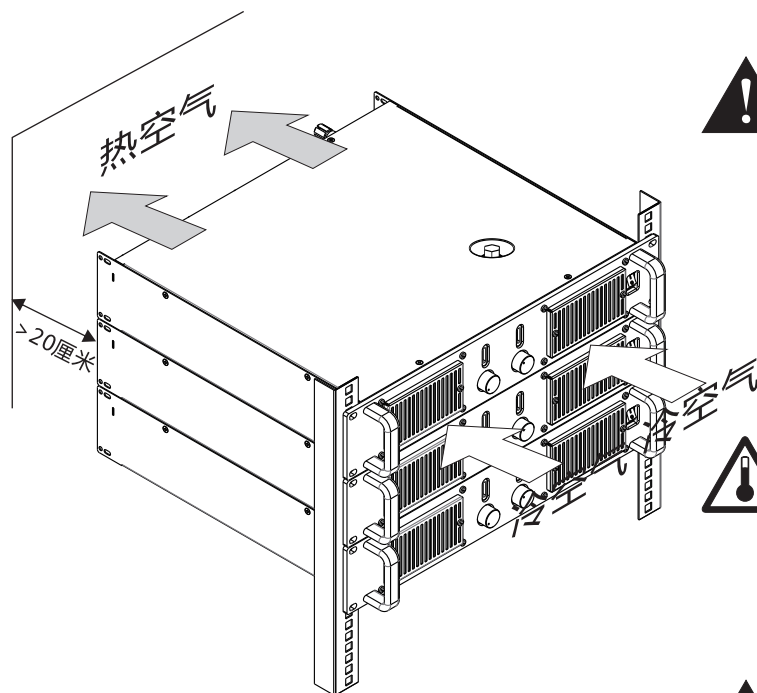

在工程竣工前，因为建造环境灰尘很多，而调试期间就会有大量灰尘积聚在滤尘海绵中，令风路不畅，造成故障隐患。

若出现此情况，建议采用大功率吸尘器直接清洁滤尘海绵，而且每月维护一次，从而保证其散热良好。

输入/输出接驳线缆不可堆叠在产品排风口，请置于功放两侧捆扎好！




环境气温应 $<35^{\circ}\text{C}$ 下工作



非水平堆叠时，建议机尾排风口向上或直向排风口

风短路的避免

防止排出的热风回送至前面吸风口。

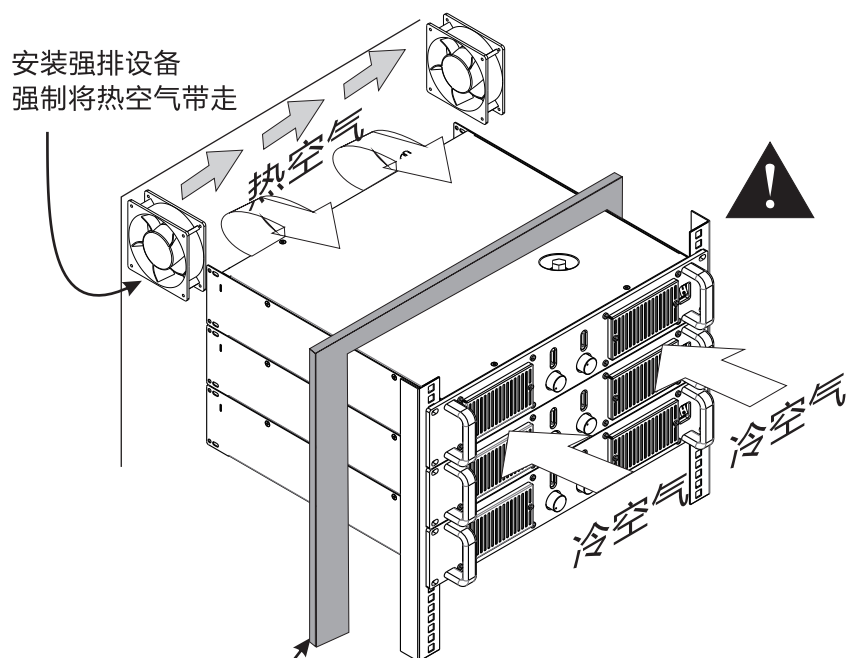


在工程调试时验证机柜内气温，在极限条件下，也应持在 35°C 以下。



遮挡热空气
回流到前面吸风口

开、关机步骤

开机

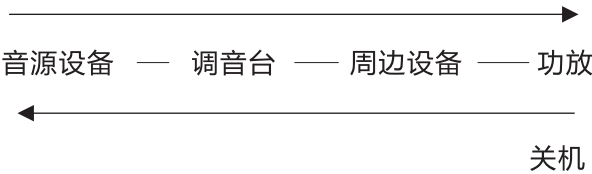


对于大功率系统，次序尤为重要，不按该顺序将有可能损坏器材。为此建议您采用电源管理器来管理。

系统电平调整

以下调整过程，功放应处于空载的状态

流程：

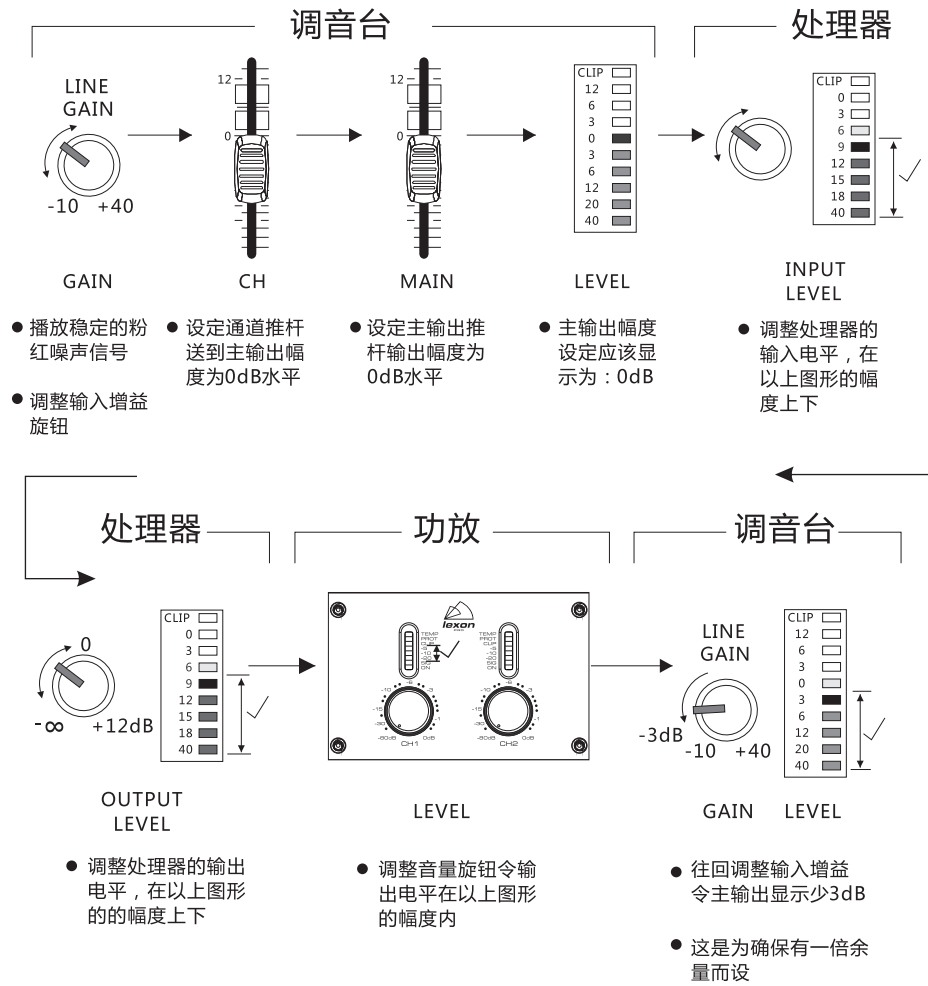

该调试流程为常规过程，为了更准确地调整系统，应聘请专业工程师来进行该项操作。

带载试听

从较小音量位置开始调整功放音量旋钮，在证明音箱发出正常的音乐后，方进一步将音量开大。在音箱声压输出接近饱和时（注意此高声压当中的风险），功放的电平指示灯应该在CLIP灯亮起之前，并确保CLIP灯不能频繁亮起。



该步骤必须请有经验的专业人士操作，未有十足之把握敬请小心操作！

型号	PXM650	PXM850	PXM1450
功率			
8Ω立体声功率*	650Wx2	850Wx2	1450Wx2
4Ω立体声功率**	1000Wx2	1350Wx2	2400Wx2
2Ω立体声功率**	1300Wx2	1850Wx2	3300Wx2
8Ω桥接功率**	2000W	2800W	5100W
4Ω桥接功率**	2600W	3600W	7200W

其他参数

频率响应	20Hz-20KHz(+0/-1.5dB)		
总谐波失真	≤0.05%		
信噪比	≥90dB		
阻尼系数	≥300		
分离度	≥65dB		
转换速率	≥10V/μs		
输入灵敏度	0.775V/1V/32dB		
输入阻抗(平衡/不平衡)	20KΩ/10KΩ		
电压增益(8欧时)	39.3dB	40.5dB	43dB
输出类别	Class I™		
冷却	从前到后抽风		
保护功能	软启动/VHF/直流/短路/过载/削峰/失真压限/过热/开机音量渐大		

连接

输入	平衡输入XLR母插座/平衡并接XLR公插座		
输出	两位红黑接线柱/ NL4型SPEAKON插座		
功能			
前面指示灯	工作状态/输出电平/削峰/失真压限/超温/保护		
后面指示灯	桥接/并接模式指示灯		
前面板	电源开关/音量控制旋钮		
后面板	立体声/并接/桥接模式选择开关/灵敏度选择开关/信号接地参考选择开关		


尺寸/重量

产品外形尺寸(毫米)	483x451x89	483x451x89	483x451x89
外包装尺寸(毫米)	595x565x170	595x565x170	595x565x170
毛重	20kg	21.5kg	28kg
供电要求	不可脱拔电源线 110V或120V/60Hz.±10% 220V或240V/50Hz.±10%		

注意 1、*,此功率是按照EIA标准测量得出。
2、**,此功率是使用40ms脉冲1kHz正弦波在1%总谐波失真下测量得出。
3、其他数据按：Q/SAE 1-2009标准测试得出。

机箱尺寸(毫米)

适用型号：PXM650/PXM850/PXM1450

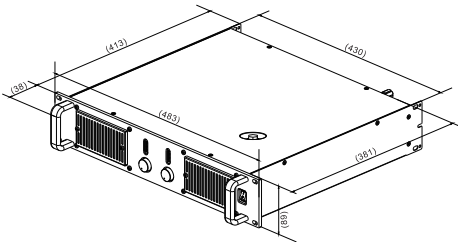

SAE保留对以上参数的解释权，参数有所变动恕不再另行通告，最后参数以产品说明书为准。

通电后，无任何反应

马上用万用表测量插座是否有电，在没有万用表时可用试电笔，但必须灯泡显示明亮，否则可怀疑电压不正常。若插座电压正常，供电无怀疑后，通电的功放仍然无任何反应，则可判断该功放有故障，需要专业人员进行进一步故障判断。

功放无声音输出

1、首先判断输入的信号是否正确

▲卡侬XLR的2/3脚有无反接的可能，地屏蔽线是否连接可靠。跟据输入线路的设计不同，可能在以上有些产品会表现正常，而有些则无声，请必须按照2+、3-的方式连接。**不可以采用比对其他功放（包括同厂产品）的方式判断。**

2、面板指示信号灯不亮

排除信号线问题后，若功放无输入信号反映，可判断功放本身可能存在故障，需专业人员进行进一步故障判断。

3、输入信号正常但仍无声

正面的信号指示灯是否有闪动和根据音量大小而跳跃，若正常，而无声音输出，立即检查连接的NL4插头是否连接正确（ ± 1 ， ± 2 的连接问题）是否连接牢靠。若以上都无问题，仍然无声，可以尝试其它通道观察是否有相同的现象。若还是一样，请立即更换另一个NL4插头再作连接尝试。

▲跟据经验，可能有某些插头和该产品的插座接触不良导致的。

功放输出声音失真

1、失真表现为小声音已经很明显能听出声音有破裂声在排除信号本身和音箱的问题后，可判断为该功放可能存在故障。需专业人员进行进一步故障判断。

2、某个频段失真

首先判断音箱本身是否能承受该功放的输出功率，一般在95~105分贝时判断，再大的音量输出不作评论。本篇幅只讨论功放自身问题的排除。若是在中频段声音有轻微破裂尾音，并且在音量越小时表现为越明显，可判断为功放可能有交越失真，此失真声音比较容易和音箱本身高频激励器故障混淆，请做出判断前最好再连接其它判断为正常性能的音箱比较测试一下。

3、大声压时失真

在小声压时表现正常的情况下，首先判断音箱对所播放音乐信号的大动态时的承受能力。请在合适的音量下聆听判断，若功放削峰指示灯（CLIP）时常亮起，请再降低音量后判断。音箱和功放都有适用的范围，请在所能接受的范围内使用，在超大音量下失真则可能功放及音箱都已经进入饱和状况，请适当降低音量使用。

功放保护指示灯（PROT）点亮

此指示灯点亮表明功放进入保护状态。形势不妙！

1、可能是温度过高、有高于4K的连续正弦波输出超过1秒、输出短路或接近短路等。以上情况可恢复的。并非故障。等恢复后可继续使用。但过热会等待较长时间才可恢复。并且出现过热时就必须检查产品的风扇是否运作正常，空间温度是否过高等，须排除问题后方可继续运作。若怀疑音箱短路，可以用万用表测量音箱线两端直流电阻是否低于2欧甚至1欧。（因电阻较小，为保证测试精度，请校准万用表后再测量）

2、此灯常亮，不可恢复

此类情况一般为功放本身故障导致，请联系维修人员跟进。

有交流声（哼声或称之为电流声）

1、功放不插入任何信号就有交流声

请将功放搬离于系统电源地线隔离的位置继续测试，只连接火零N/L，不接地线。若输出还是有交流声，可判断为产品本身有问题，请与维修人员联系。

2、连接系统后有交流声

此现象为系统各单元设备的地电位不同而产生的。多数出现在供电为三相电时，各设备连接不同的相线，甚至不同上庄电源，零线带电导致，并非功放故障。

解决办法超出本说明书叙述范围，这里附赠解决经验，仅供参考，本厂不对此叙述负责！

A、梳理用电，尽可能使用同一配电箱的电源。

B、在必须接地的情况下，将不同的接地点强迫接为一点，在此动作前，请判断地线电位必须为零，若地线本身带电，则表明地线可能与零线相连。请先解决此问题。

C、我们不建议浮地使用设备。

以下情况表示放大器需要维修

- 1.产品冒烟或者发出严重烧焦味而不能使用时
- 2.机箱严重凹陷或者变形
- 3.产品浸入液体中
- 4.内部部件松动
- 5.加电时交流断路器自动跳开

免责声明

制造商蜚声演出器材制造有限公司对于因不当使用本产品而导致扬声器产品或其他设备所造成的任何损坏不承担任何责任！

制造商蜚声演出器材制造有限公司 对本产品提供2年有限质量保证。

制造商蜚声演出器材制造有限公司担保其产品自销售之日起2年内不会发生材料和制造工艺缺陷；若在正常安装和使用条件下发生的损坏，制造商蜚声演出器材制造有限公司将按照本质保协议无偿更换有缺陷的零件和维修故障产品。但客户必须将产品送回我们的工厂或授权的维修点或指定经销商处，同时必须预付运费和附带购买证明（产品保修卡客户联及销售收据或发票复印件）。

此质保协议规定，退回的产品必须经过我们检查断定存在制造缺陷。本质保不适用于任何误用、疏忽、意外、不正确安装或日期编码、序列号被去掉或破损至不能辨认的产品。

制造商蜚声演出器材制造有限公司不对意外或间接发生的损害承担责任。

此质保赋予您特定的法律权利。

通讯地址：

蜚声演出器材制造有限公司售后服务部

中华人民共和国，广东省，佛山市，南海区，和顺，文教路东段39号，蜚声工业园。

邮政编码：

528241

电话：

0757-8560-8331

传真：

0757-8568-8191

电子邮件：

support@saechina.com

品牌网址：

www.lexonpro.com

制造商网址：

www.saeaudio.com

产品物质拆分表

为满足中国《电子信息产品污染控制管理办法》（信息产业部第39号令）的相关规定和要求，现对产品中有害物质，按部件分类，声明如下：

部件名称	有毒有害物质或元素					
	铅（Pb）	汞（Hg）	镉（Cd）	六价铬（Cr(VI)）	多溴联苯（PBB）	多溴二苯醚（PBED）
机箱	×	○	○	○	○	○
主板模块	×	○	○	○	×	×
电源模块	×	○	○	○	×	×
I/O板模块	×	○	○	○	×	×
控制模块	×	○	○	○	×	×
灯板	×	○	○	○	×	×
备注： ○：表示该有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006规定的限量要求下 ×：表示该有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006规定的限量要求。						

在中华人民共和国境内销售的电子信息产品上将贴上有“环保使用期限”（EPuP）符号。圆圈中的数字代表产品的正常环保使用年限。




1. Read these instructions.
2. Keep this user manual.
3. Pay attention to all the notice.
4. Comply with these instructions.
5. Clean with soft cloth, or blow with hyperbaric air.
6. Warning: Avoid the formation of hot air circulation. Installation as suggested way.
7. Do not install near heat, make sure the application temperature is below 35°C.
8. Ensure that the grounding is valid, floating ground is not recommended.
9. Protect the wire from being trampled or extruded, especially the plug, socket and the connector of it.
10. Make sure the startup and turnoff procedure: Pre-amp - Amplifier (Power on) Power amplifier (off) - Pre-amp.
11. Power supply voltage must be in accord with the requirement of the equipment before use it.
12. Signal distributor is advised to be used when the input signal paralleled with more than 3 amplifiers, to ensure the input signal without distortion.
13. Don't connect the output interface of one channel to the input interface of another channel in the power amplifier. Don't connect one power amplifier to another one by connecting their output in series or parallel connection.
14. When equip the audio equipments, the power of the power amplifier should be 50%-100% more than the loudspeaker power. Be careful when in bridged mode.
15. When maintenance, don't connect the probe of the oscilloscope to the output interface under bridge mode in case of damaging the power amplifier and the oscilloscope.
16. Suggestions:
 - 1) Good quality NI4 Speakers screw plug is advised.
 - 2) Power distribution system should ensure the safety of applications of more than one amplifier.



The exclamation point triangle is used to alert the user to important operating or maintenance instructions.



The lightning bolt triangle is used to alert the user to the risk of electric shock. non-professional qualified technicians do not open TOP OR BOTTOM COVERS for maintenance

 **WARNING**
TO REDUCE THE RISK OF FIRE OR ELECTRIC
SHOCK, DO NOT EXPOSE THIS APPARATUS
TO RAIN OR MOISTURE.

Welcome

Thank you for purchasing our products.
The PXM series power amplifier is specially designed for sound system in large stadium, tour, theater. Please take the time to study this manual so that you can obtain the best possible service from your amplifier.

Unpacking

Please unpack and inspect your amplifier for any damage that may have occurred during transit. Confirm the preset voltage of the power amplifier matches your local voltage rating (Please refer to the print on the rear panel for detailed information). We also recommend that you save all packing materials so you will have them when need to return the power amplifier.

Support and Service

Please contact directly with the local SAE distributor, to get the quickest after-sale service and technical support.

When need to contact with manufacturer, email and fax are available:

Email: support@saechina.com

FAX: +86-757-8568-8191

Important safety precautions


Our products has already taken the safe requirement in to consideration and all the finished products have been tested under the requirement of the government before sale. Due to the inner dangerous high voltage and electricity, we strongly recommend you read all instructions, warnings and cautions contained in this manual. It will increase the chance of getting shock by the electricity if the product falls down, recess in the appearance, soaked or there were some parts loose internal. If there are problems above, please turn off power immediately and send the defective units to local distributor for service.

Rated Power

Model	8 Ω *	4 Ω **	2 Ω **
PXM650	650WX2	1000WX2	1300WX2
PXM850	850WX2	1350WX2	1850WX2
PXM1450	1450WX2	2400WX2	3300WX2

1、*,The power is tested under EIA standard.

2、**,This power tested under 1% total harmonic distortion with 40 ms pulse ,1 kHz sine wave .

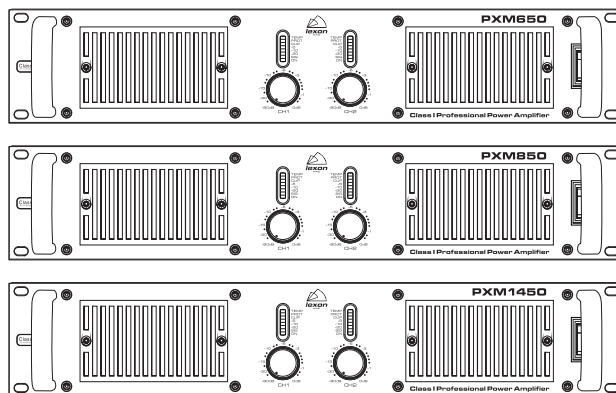


Product Introduction

- PXM series is a new high efficiency transformer power amplifier. Compared with the prior products in quality, it's improved hugely, the breakthrough will bring you enjoyment in sound.
- We used the second generation "Class I " output circuitry which is our patent technology can have the high efficiency of "Class D" and the sound quality of "Class A".
- Adopt the third generation voltage-stabilizing SMPS can keep stable and strong output power even the input voltage fluctuate a lot.
- The Differential transmission used between Pre/Post equipment, ensure the lower output noise.

Power amplifier module and switch power supply module

- All adopt the AI plug-in technology, thus has two following advantages:
 - 1) Every element has enough margin.
 - 2) It can protect the circuitry from the accumulated dust In the bad environment.
- Power transistor installed directly on the radiator (no mica plate and dielectric insulation thermal conductivity) thus can reduce the thermal resistance of power transistor and can effectively reduce the instantaneous high temperature rise of power transistor.
- Selects high quality adjustable potentiometer, as far as possible to reduce the wire connection and interface of the modules;
- **These designs are aim to ensure the new generation products more stable and reliable.**

Front Panel

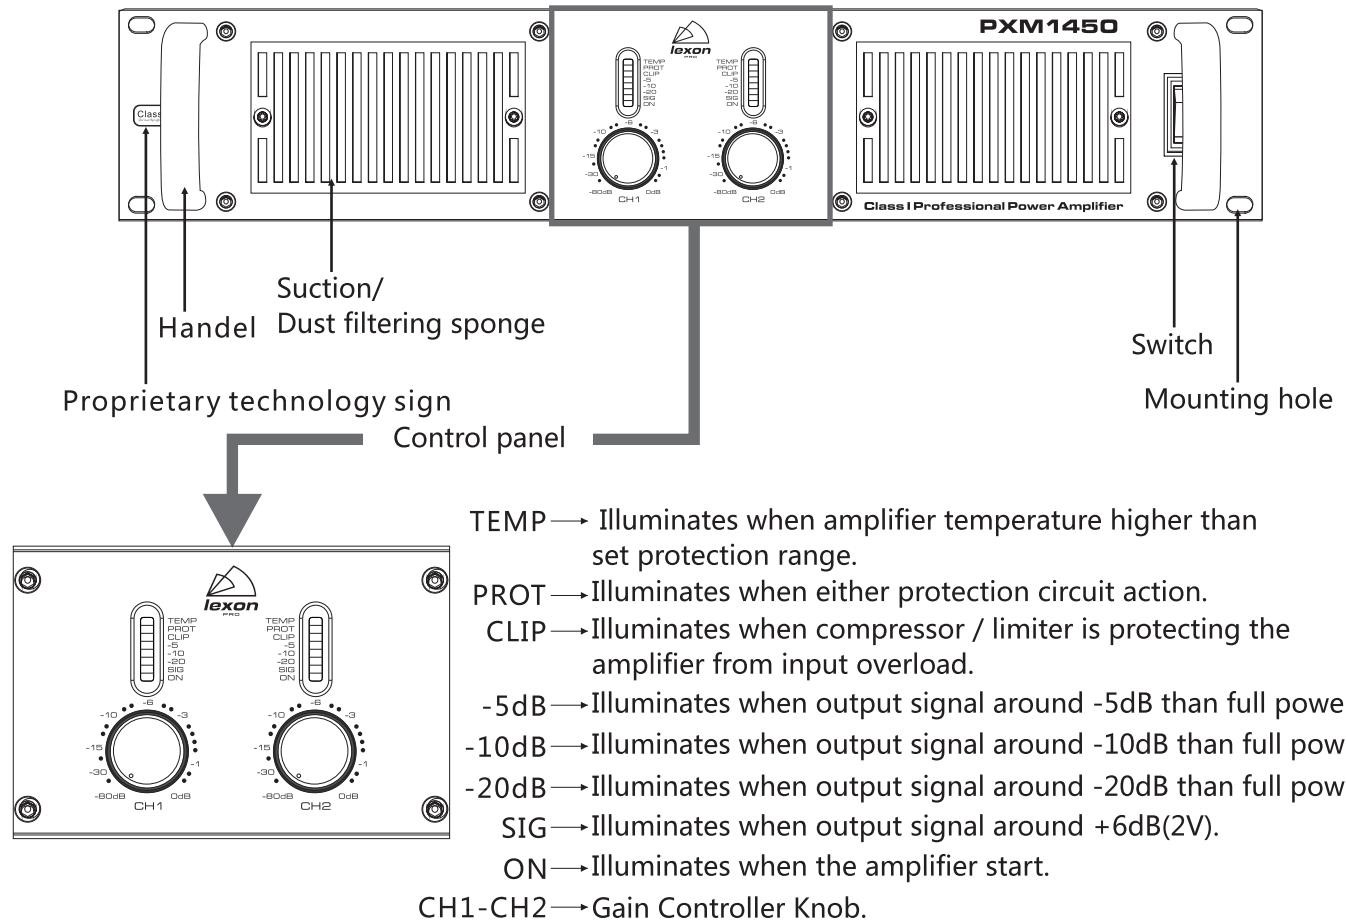


Cleaning guide of the strainer mesh




The first time cleaning of the strainer mesh should be right after installation. Recommend to clean the strainer mesh quarterly.

Please do not run the product without the strainer mesh, or it makes the service life of the product shorten.


Such condition will be considered as no warranty.

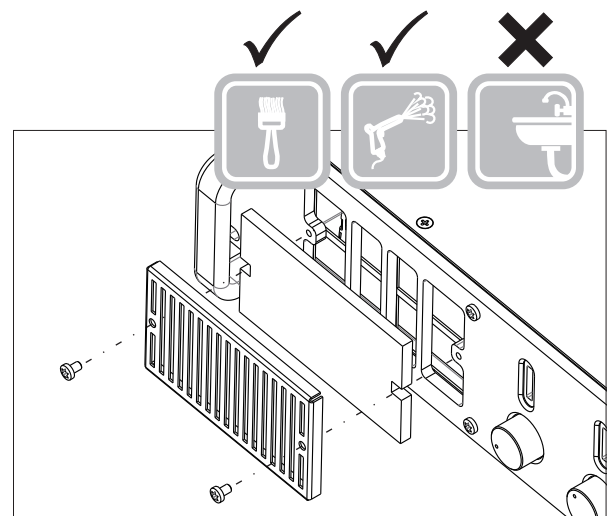

Rear Panel

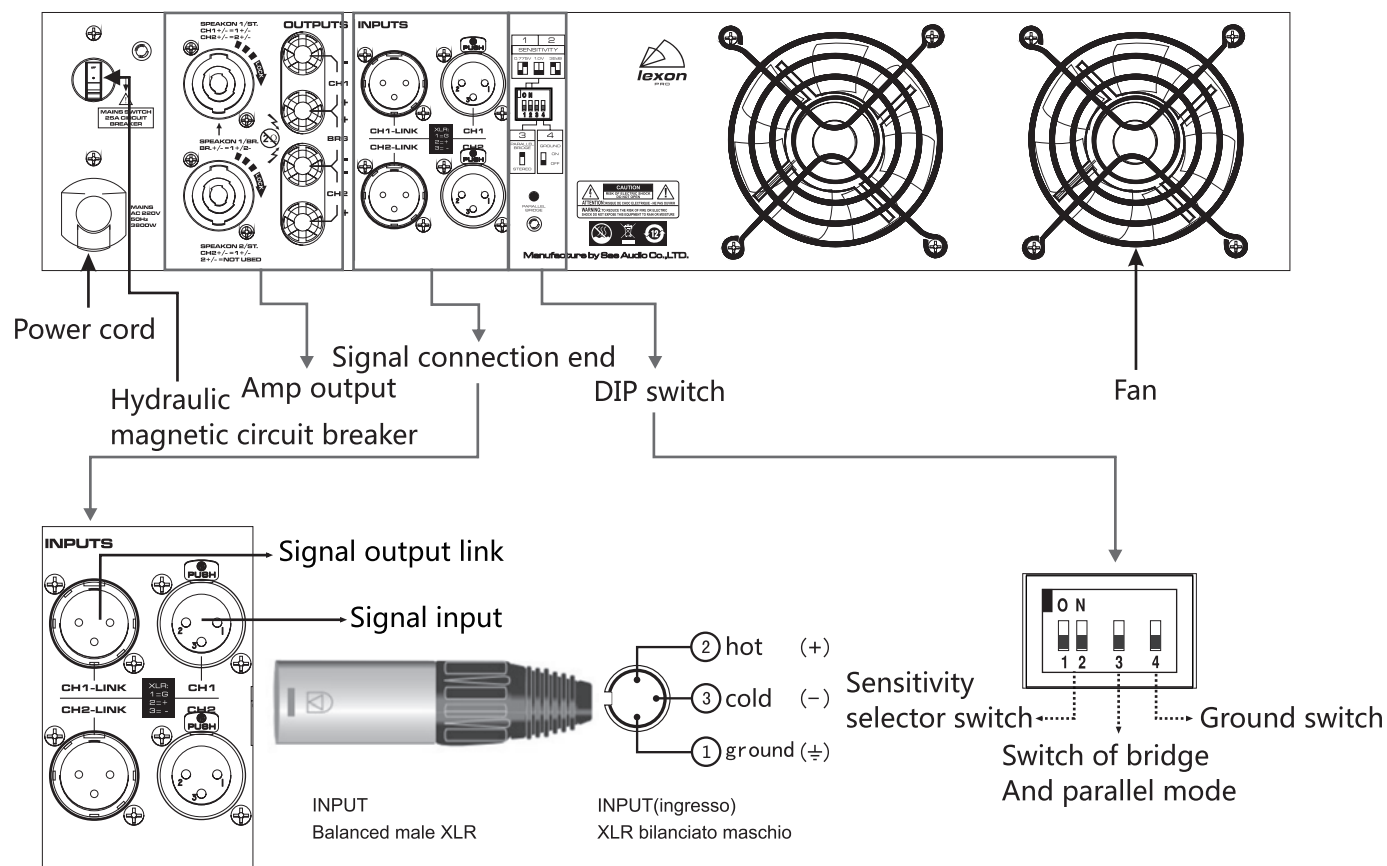

Speakon output

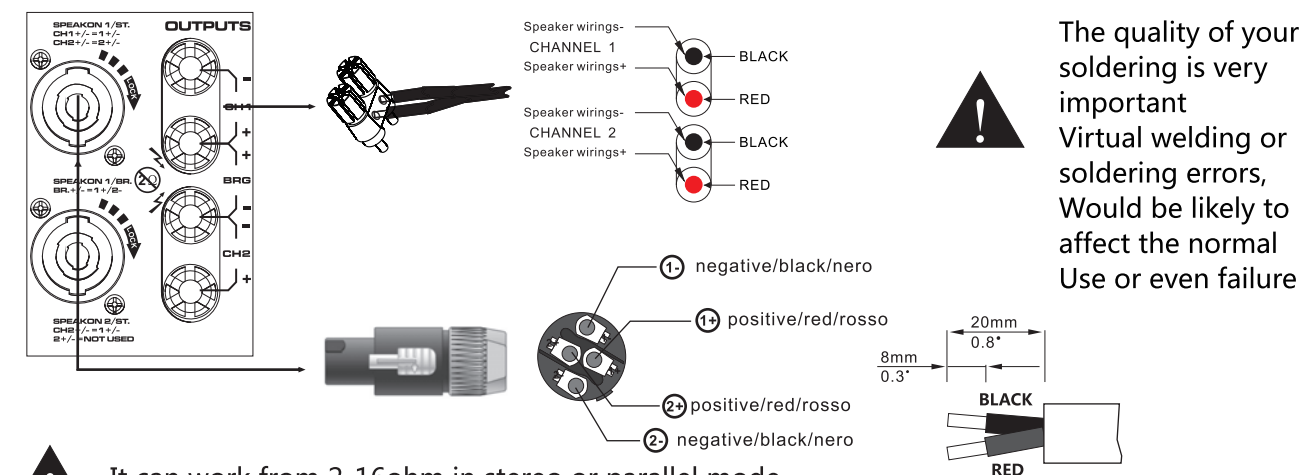


The quality of your soldering is very important. Virtual welding or soldering errors, Would be likely to affect the normal Use or even failure.




It can work from 2-16ohm in stereo or parallel mode
It can work good from 4ohm to 16ohm In bridge mode




We don't suggest you use the amplifier under 4ohm bridge mode, it will short its normally use life or have some unnecessary failure.

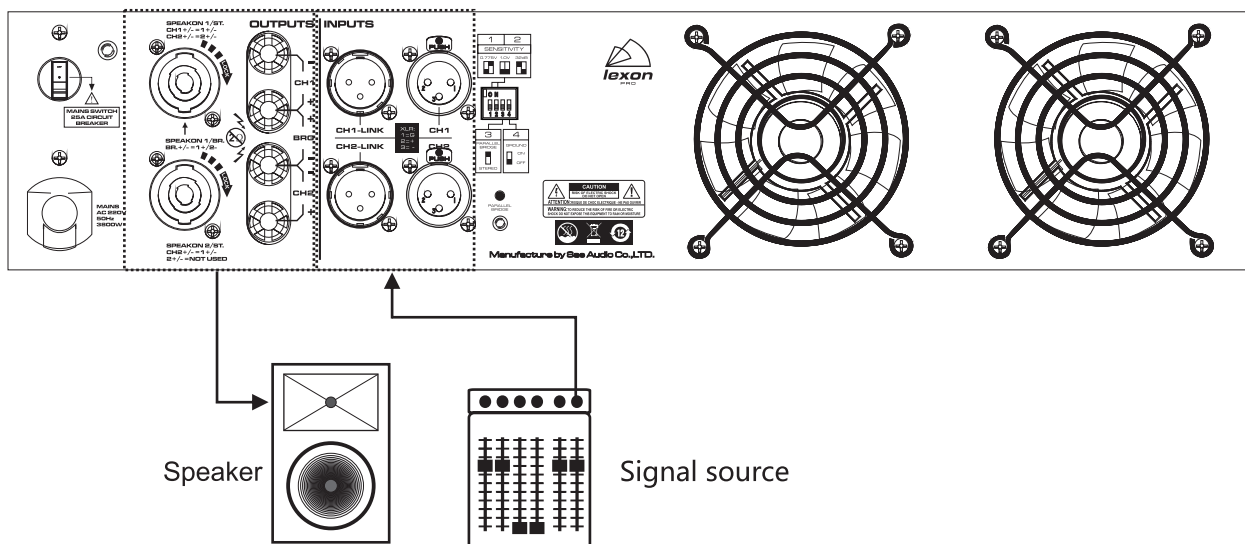


Bridge mode

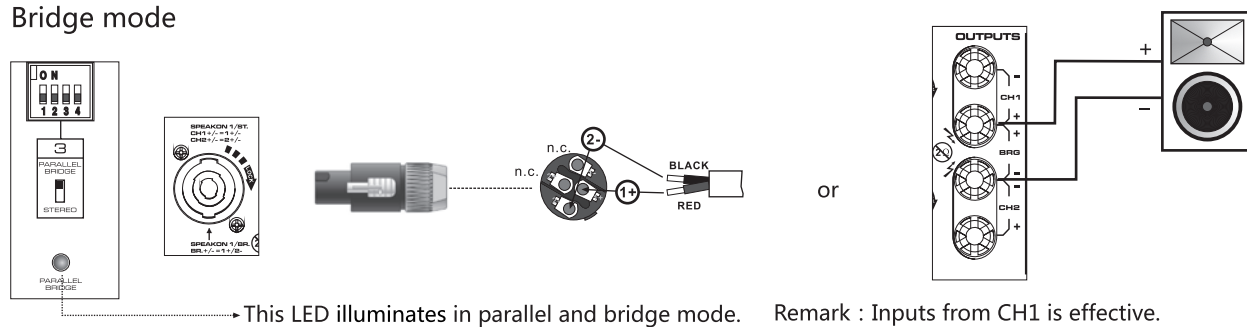

Parallel mode

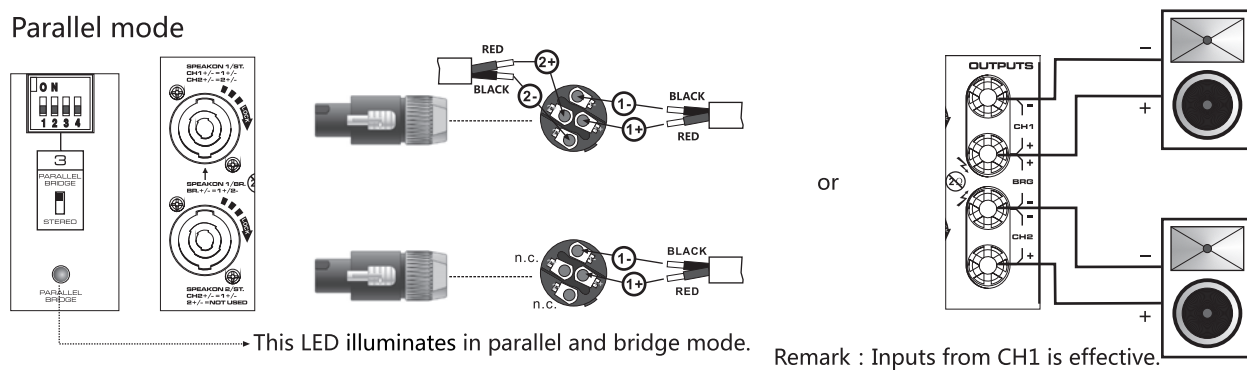

Stereo mode

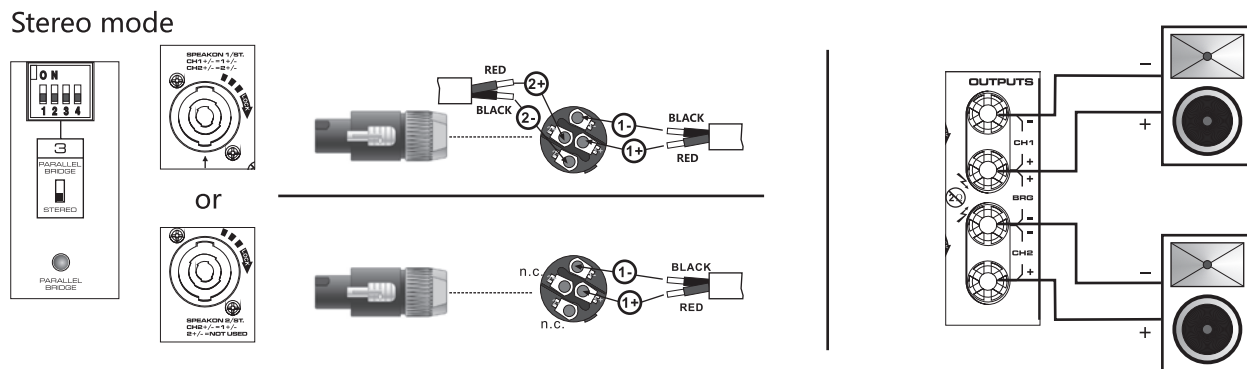

Power & Wiring distribution

The amplifier power supply isn't a non-resistance load and its use on unstable music signal, so it can not calculate with "Voltage x Ampere=Watt", the actual power consumption can not be fixed formula.

Dissipation power is tested according to 1kHz/8Ω $\frac{2}{3}$ rated power.

Referring to the power dissipation and power supply/AC of different product for wiring
We suggest the users to match not less than the following wiring size specifications, to obtain the better comprehensive properties.

The Standard Voltage : 220/230V/240V

Model	Dissipation Power	Cable size
PXM650	1700W	$\geq 1.5\text{mm}^2$
PXM850	2300W	$\geq 2\text{mm}^2$
PXM450	3800W	$\geq 2\text{mm}^2$

The Standard Voltage : 110/115V/120V

Model	Dissipation Power	Cable size
PXM650	1700W	$\geq 2\text{mm}^2$
PXM850	2300W	$\geq 2.5\text{mm}^2$
PXM1450	3800W	$\geq 3.2\text{mm}^2$

When you use 1 power supply socket for many amplifiers, the power cable of the outlet should be bigger and also the internal cable of socket.

More than one installation

When in the same AC power supply and its total power is more than 10kW, we suggest you use three phase and five wires in power distribution and the null wire can not use with Ground wire together.

Check after powered



For the first time powered, you have to use the multimeter to measure voltage, and confirm whether meet the requirements of the product. And do not connect signal and speaker after you confirm everything is ok, then power off the amplifier.

The importance of Ground wire




You should connect Ground for safety use.

If you don't have qualified Ground connection or not use the Ground, you may have a electricity shock. To avoid such thing happen, please connect Ground when you use.

Stack installation

To ensure the cooling environment, please meet the following condition

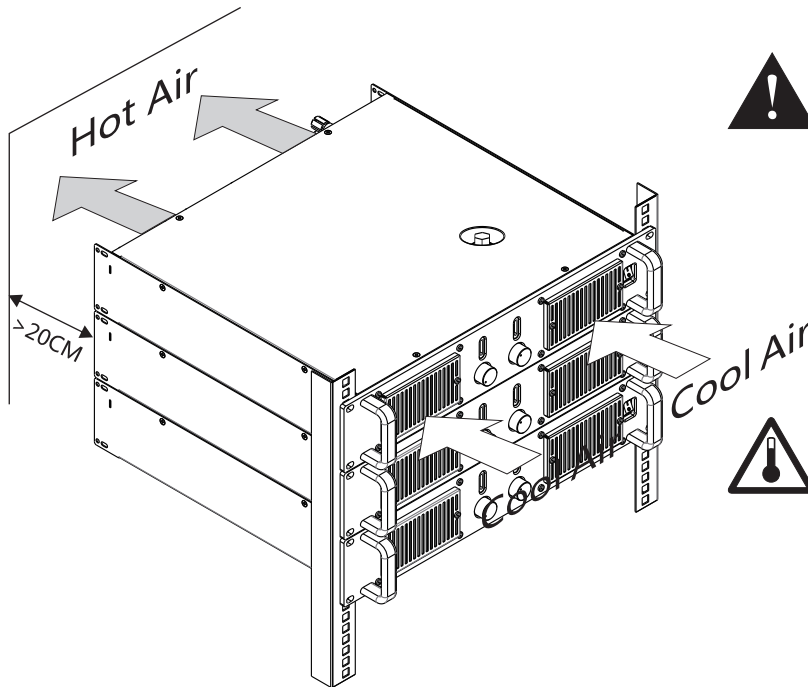


In order to have a good heat dissipation condition for amplifier, please clean the filter after you finish your install, because the dust in filter will stop the air vent, it's not good for the heat dissipation. And you should clean the filter net every month.

The ambient temperature should be lower than 35°C while running the amplifier

To avoid heat protection

To prevent the hot air back to front air vent

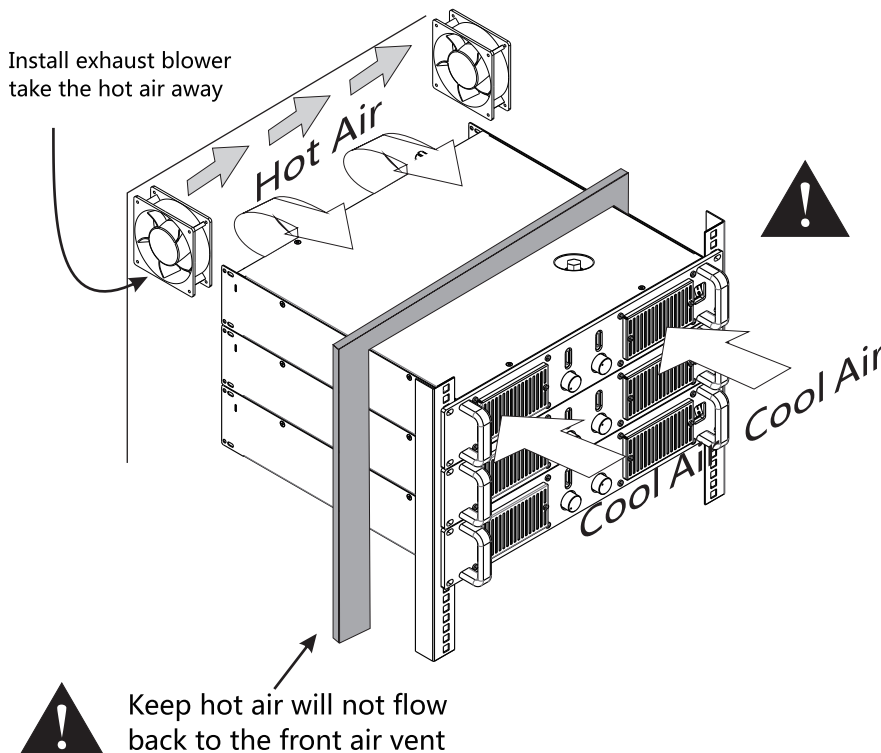

If use in Non-horizontal stack, we suggest the rear exhaust outlet up or straight to the vents of the room

Try your best to keep the temperature under 35°C even in extreme condition

Procedure

Power On

Source — Sound console — Peripheral devices — Power Amplifier

Power off



For high power system, the Power-on order is very important, not in the order is likely to damage the equipment. Therefore we suggest that you use the sequence power device.


Power Level Adjustment

Power amplifier should be in the condition of no load in the following adjustment process:

Process :



This is a normal step to adjustment, for more professional adjustment you should have a professional person to do that.

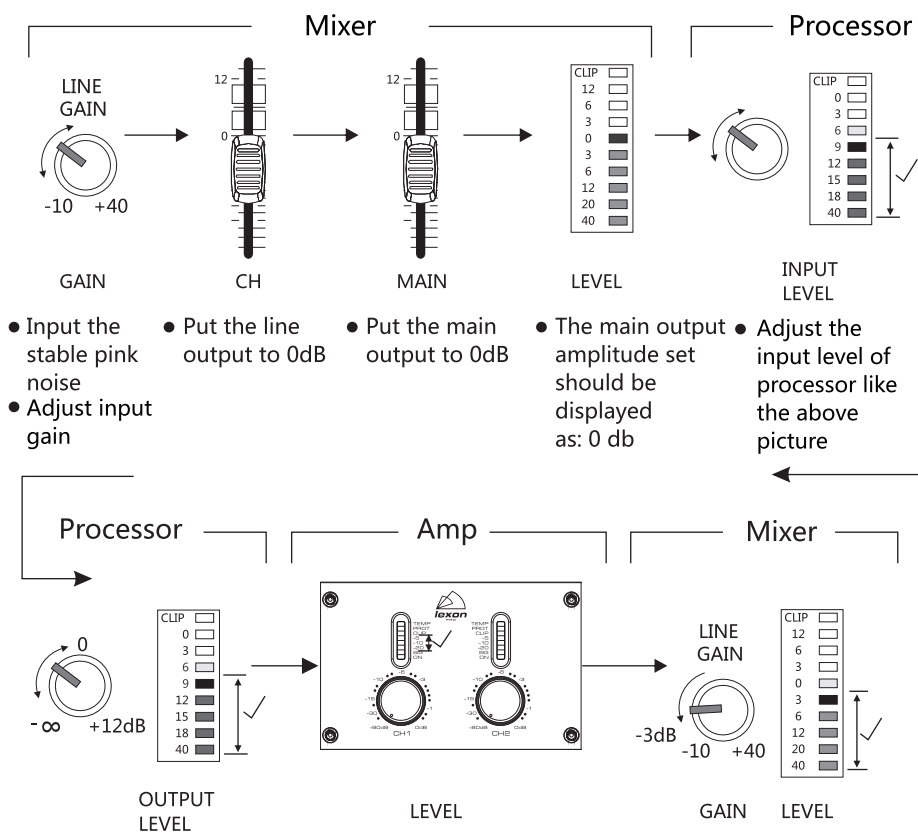

Music Audition

Adjust the volume from very small to loud slowly, after you confirm the sound is normal then make it more louder. When the speaker output is close to its limit, the CLIP light will lights up and you should turn down your volume now, don't let the CLIP lights on long time, it means over load, may damage the system.



This step should operated by professional person, if you don't know how to do, please be careful!

Model	PXM650	PXM850	PXM1450
Output power			
8Ω stereo *	650Wx2	850Wx2	1450Wx2
4Ω stereo **	1000Wx2	1350Wx2	2400Wx2
2Ω stereo **	1300Wx2	1850Wx2	3300Wx2
8Ω bridge **	2000W	2800W	5100W
4Ω bridge **	2600W	3600W	7200W

Other Specifications

Frequency response	20Hz-20KHz(+0/-1.5dB)		
THD+N	≤0.05%		
S/N rate	≥90dB		
Damping factor	≥300		
Crosstalk	≥65dB		
Slew rate	≥10V/μs		
Input sensitivity	0.775V/1V/32dB		
Input impedance(bal/unbal)	20KΩ/10KΩ		
Voltage gain (8 ohm)	39.3dB	40.5dB	43dB
Output circuitry	Class I™		
Cooling	Air flow from front to rear		
Protection	Soft start, VHF, DC, short circuit, over load, clip limit, over heat, progressive volume		

Connection

Input	Balance input XLR-F, Balance output XLR-M
Output	Two red and black Binding posts、NI4 SPEAKON
Function	
Front panel indicator	Working state, voltage, clip limit, temp, prot
Rear panel indicator	Parallel/Bridge selector indicator
Front panel	Power switch, Volume control
Rear panel	Stereo/Parallel/Bridge mode selector switch 、Sensitivity selector switch、Sig ground switch

Dimensions/Weight

Product Dimension (mm)	483x451x89	483x451x89	483x451x89
Packaging Dimension(mm)	595x565x170	595x565x170	595x565x170
G.W.	20kg	21.5kg	28kg
Power Supply	Non-removable IEC power cord 110V or 120V/60Hz.±10% 220V or 240V/50Hz.±10%		


Remark : 1、*,The power is tested under EIA standard.

2、**,The power is tested under the condition of 40ms burst,1kHz sine wave and 1% THD

3、Other specifications measured according to Q/SAE 1-2009 standard.

Product dimension(mm)

Suitable model:PXM650/PXM850/PXM1450

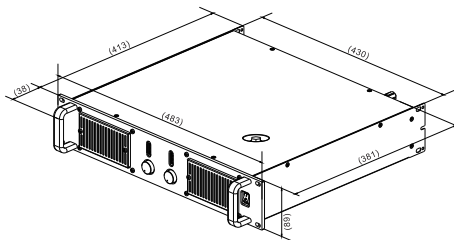

The manufacturer reserves the rights to make changes in specification without prior notice.
The final specification is subject to the user's manual.

After powered without any response

Measure the outlet with a multimeter to check if there is power available and when no multimeter, you can have a test pencil. If the power supply is normal and the amplifier still no response when powered then there is something wrong with the amplifier, need professional person to check it.

No signal output

1. First check if the signal input is right.

⚠️ Check the connect of XLR, if the 2 and 3 reverted or the ground is reliable. Different circuitry design will have different connect way of the XLR, please follow the 2+、3- to soldering.

It can not be judged by comparing with other amplifiers (including other amplifiers in the same factory).

2. The signal light don't lights up

If all the signal input is fine and the signal light don't lights up then may the amplifier has failure, you need to ask the professional person to check it.

3. Signal input normal but no sound

The signal light will flash with the change of input Volume, but now sound out, then you can check the connect of speaker if it is connect good and the wires are connect right (some times the problem of the wires connect, check its ± 1 and ± 2 connect), after the check above if still no sound out, please change a speaker cable and check again. Because some times also caused by the bad quality of the Speakon connector problem of the amplifier.

⚠️ Through experiences, it may caused by the bad connection of some plugs and the socket.

Output sound distortion

1. After check the signal and loudspeaker they are fine and still can hear distortion when small sound, then may the amplifier has failure, need professional person to check it.

2. Some frequency band has distortion

First, check if the loudspeaker already overload, normally judge it in 95~105dB for higher SPL we don't comment here. Here we just think about the failure recovery of the amplifier. If in the middle have some rupture sound and more smaller volume more obvious, then it should be crossover distortion of the amplifier and this kind of distortion is easy to confuse with the failure of loudspeaker itself. If the amplifier have problem then you should send back to the manufacture for repair.

3. Distortion is High SPL

If the sound is normal when small volume and then you need to check the limit SPL of the loudspeaker. You can listen it in suitable volume and if clip light works, then you need reduce the output. Both loudspeaker and amplifier have limit, you should use them in their limit if in very high SPL they have distortion you should take care of them and reduce the output to the right position.

The protection light blinks

When the PROT light works, the amplifier into the protection mode.

1. Maybe the temperature is too high or output short or near short and they are not failure they can recovery after you can use it normally. But over heat will take more time to recovery. Also when over heat happened you should check the fan and the temperature of the install environment, if does you should solve the problem then can use amplifier. If you think the speaker was short, you can with a multimeter to check if the resist is lower than 2 ohm or 1 ohm with DC (Please calibrate the multimeter to measure for accuracy because of the small resistance).

2. If the PROT light always light up then it should be the problem of amplifier, you should send it back to professional person for repair.

Hum in the system

1. Hum exists even when there is no signal

Please keep the amplifier away from earth wire of power supply cables, just connect the fire wire and zero wire, no ground wire. If the hum is still existing, it can be judged that there are some problems in the amplifier. Please get in touch with professionals.

2. Hum exists when the system is completely connected

This is caused by the different ground voltages in difference devices in the system, mainly happens when the power supply is under three-phase distribution condition, each device is connected to different phase. This is not caused by amplifier.

Solution experiences, just for reference

- Combining the electricity, the power distribution box using the same one for all if possible.
- Make sure the grounding wire potential is zero and force the different grounding wire to the same level, if the grounding wire itself charged, indicates that the wire may be connected with the zero line. Please solve this problem.
- If unavailable above, then only to disconnect the ground wires of all devices, which helps to reduce the AC. But this is not meet the safe use of electricity, users must know what will happen if to do in this way. We do not recommend the floating use.

The amplifier is required maintenance in the condition below:

- If the amplifier smokes or smells burning.
- If the cabinet has severe indentation and deformation
- If the amplifier are dipped into the water
- If the internal components loosen
- If AC breaker skips out when current increases.

Disclaimer

SAE Audio Co., Ltd. is not responsible for any damage of loudspeakers or other equipments caused by negligence or improper installation.

SAE Audio Co., Ltd. offers 2 years limited warranty for this product.

SAE Audio Co., Ltd. Guarantees that this product has no material defect during two years from the sales date; if the damage caused under the normal installation and operation, SAE Audio Co., Ltd. shall change the defective component and repair faulty product for free according to this Quality Guarantee Agreement. However, users must send the product to our factory or any authorized maintenance points or designated distributors, affording the re-paid freight, together with buying proof (including customer copy of product warranty card and payment receipt or invoice copy).

As per this Quality Guarantee Agreement, the returned product must be judged having manufacturing defect it self after our inspection. This agreement doesn't apply for products with damage caused by any wrong operation negligence, accident, inappropriate installation or products with no date code and sequence no or damaged ones beyond recognition.

SAE Audio Co., Ltd. shall not afford responsibility for any damage caused by accident or indirect factors. The agreement authorized you specific legal rights.

Address:

SAE Audio Co., Ltd. After Sale Department

No.39,East,Wenjiao Road,Heshun,Lishui,Nanhai,Foshan,Guangdong,China.

PC:

528241

Tel:

0757-8560-8331

Fax:

0757-8568-8191

Email:

support@saechina.com

Brand website :

www.lexonpro.com

Website:

www.saeaudio.com

www.lexonpro.com

Manufacturer:Sae Audio Co.,LTD.
Sae reserves the right to make changes in specifications
and products without prior notice.
制造商：蜚声演出器材制造有限公司
蜚声演出器材制造有限公司版权所有